

SETTING GUIDE

Xcellent Plus Victron Inverter



Model Example: MultiPlus-II 48 | 3000 | 35 Inverter

1 Battery Dial Setting

Battery Switch Position

Inverter Dial

ON
1 2 3 4 5 6
1.1.1.0.0.0

When batteries are in parallel, only need to set the master battery to the above dip switch, and the slave batteries do not need to be moved.

Address Dial

Code	Dial Switch Position	Definition
01		Set as Battery 1 or the single battery operation (communicate with the inverter)
02		Set as Cluster 2
03		Set as Cluster 3
04		Set as Cluster 4
05		Set as Cluster 5
06		Set as Cluster 6
07		Set as Cluster 7
08		Set as Cluster 8
09		Set as Cluster 9
10		Set as Cluster 10
11		Set as Cluster 11
12		Set as Cluster 12
13		Set as Cluster 13
14		Set as Cluster 14
15		Set as Cluster 15

Set the dial codes sequentially for each battery when connected in parallel, supporting up to **15 units**.

Function Dial

Single Xcellent Plus: Two Xcellent Plus:

Three Xcellent Plus:

*Set the Function Dial on the master and last slave batteries to **1.0.0.0.0.0**, and the middle slave battery to **0.0.0.0.0.0**.

2 Battery & Inverter Communication Cable Settings

Battery-Side Interface Point for Inverter Wiring

Inverter-Side Interface Point for Battery Wiring

The 2m communication cable is for battery parallel. Two of 1m cables for connection with the Can box, and then connect battery with inverter (shown below).

*When connecting the battery and inverter with this box, configure the dial switches as illustrated.

ANI

CAN

A B

RS485

3 Inverter Settings

Please choose Battery type to "Lithium batteries" in the Victron VE Configure software.

4 End Settings

For further inquiries or assistance, please scan the QR codes below for more support.

Technical Support

Website

© Renon Power Technology Inc. All Rights Reserved. Specifications are subject to change without notice.

*Parameters for other inverters can be adjusted according to specific customer requirements.