

SETTING GUIDE

Xtreme LV Deye inverter



Model Example: SUN-8K-SG1LP1 Inverter

1 Battery Dial Setting

Battery Switch Position

Inverter Dial

1.1.0.1.0.0

For parallel battery systems, set the dial switch only on the master battery as specified, and leave slave batteries at default settings.

Function Dial

Single Xtreme LV: [Dial 1-6]

Two Xtreme LV: Master [Dial 1-6], Last Slave [Dial 1-6]

Three Xtreme LV: Master [Dial 1-6], Middle Slave [Dial 1-6], Last Slave [Dial 1-6]

*Set the Function Dial on the master and last slave batteries to 1.0.0.0.0.1, and the middle slave battery to 0.0.0.0.0.1.

Address Dial

Code	Dial Switch Position	Definition
01	[Dial 1-6]	Set as Battery 1 or the single battery operation (communicate with the inverter)
02	[Dial 1-6]	Set as Cluster 2
03	[Dial 1-6]	Set as Cluster 3
04	[Dial 1-6]	Set as Cluster 4
05	[Dial 1-6]	Set as Cluster 5
06	[Dial 1-6]	Set as Cluster 6
07	[Dial 1-6]	Set as Cluster 7
08	[Dial 1-6]	Set as Cluster 8
09	[Dial 1-6]	Set as Cluster 9
10	[Dial 1-6]	Set as Cluster 10
11	[Dial 1-6]	Set as Cluster 11
12	[Dial 1-6]	Set as Cluster 12
13	[Dial 1-6]	Set as Cluster 13
14	[Dial 1-6]	Set as Cluster 14
15	[Dial 1-6]	Set as Cluster 15

Set the dial codes sequentially for each battery when connected in parallel, supporting up to 15 units.

2 Battery & Inverter Communication Line Settings

Battery-Side Interface Point for Inverter Wiring

Inverter-Side Interface Point for Battery Wiring

*When connecting the battery and inverter with this box, configure the dial switches as illustrated.

One 2m communication cable is for parallel, the other 2m cable with a 20 cm cable is for connecting the CAN box and then communicate with inverter (as shown below).

CAN **RS485**

3 Inverter Settings

Select lithium battery mode and activate the battery

Set "Lithium Mode" to "00" and change the battery SOC value of "Shutdown", "Low Battery", "Restart" based on the actual needs.

4 End Settings

For further inquiries or assistance, please scan the QR codes below for more support.

Technical Support

Website

© Renon Power Technology Inc. All Rights Reserved. Specifications are subject to change without notice.