


# GHID DE INSTALARE RAPIDĂ

Aplicația DYNESS Smart ESS



1. Descărcați aplicația Dyness Smart ESS din App Store (dispozitive iOS) sau Google Play (dispozitive Android).

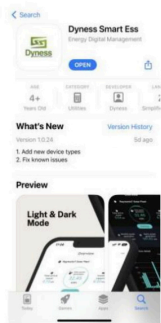

Dispozitive iOS



Android  
dispozitive

## 2. Înregistrare și autentificare

Utilizatorii care descarcă și utilizează Dyness Smart Ess pentru prima dată trebuie să se înregistreze.

Mai întâi, faceți clic pe „Înregistrare”, accesați pagina de înregistrare. Apoi, completați informațiile pentru a finaliza înregistrarea: Completați adresa dvs. de e-mail. Vă

rugăm să urmați instrucțiunile pentru a introduce corect contul dvs. de e-mail și să trimiteți și să completați codul de verificare; Îmbunătățiți informațiile contului Dacă acesta este prima


dată când vă înregistrați clientul APP, trebuie să îmbunătățiți informațiile contului; Vă rugăm să introduceți numele și parola și să confirmați;

Îmbunătățiți informațiile utilizatorului. Vă rugăm să urmați


instrucțiunile pentru a selecta fusul orar

al utilizatorului; Numărul de telefon (opțional); Codul organizației este EC03B0. Vă rugăm să bifați caseta din coloana Acord pentru a indica faptul că sunteți de acord cu Acordul de servicii și cu Acordul de confidențialitate;

Autentificare: Completați corect „Nume de utilizator/E-mail” și „Parola” și conectați-vă la Dyness Smart Ess

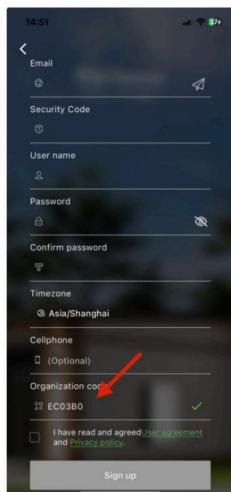


Log in

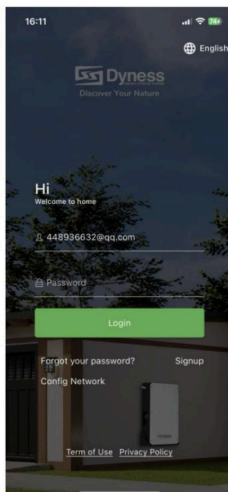

### 3 Creați o plantă

Faceți clic pe „Plante” și apoi pe „...” din dreapta sus pentru a selectați „Creați plante” pentru a intra crearea centralei electrice pagină.

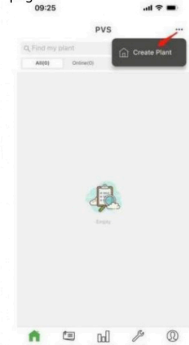


### 4 Completați informații precum Tipul afacerii și Tipul fabricii, faceți clic pe „Finalizare” pentru a finaliza crearea fabricii.

Two screenshots of a 'Plant Information' form. The first screenshot, dated 16:28, shows a form with fields for Business Type (PVS), Plant Type (Residential), Plant Name, Grid Connection Type (Full Quota), Location, Plant Photos (0), Build Date (Optional), kWh Income (Optional), Total Cost (Optional), Currency (CNY), PV Capacity (kWh), Plant Owner (User 62286943), Plant Visitor (Optional), Contact (Optional), and Phone (Optional). The second screenshot, dated 15:01, shows the same form with some fields highlighted in red boxes: 'Battery System' for Business Type, 'Battery cluster' for Plant type, 'Dyness' for Plant name, 'Full access to the...' for Grid connection type, 'Power plant location' for Location, 'Please en...' for Battery Installed Capacity (kWh), and 'CNY' for Currency. A red arrow points to the 'Finish' button in the top right corner of the second screenshot.

### 5 Adăugați dispozitiv


Faceți clic pe butonul „Adăugați colector” de sub stația de alimentare, scanați codul QR al dispozitivului pe care doriți să îl adăugați (vezi Pasul 1 din „Configurarea WiFi” de mai jos) sau introduceți numărul de serie pe care doriți să îl adăugați, după introducerea corectă a datelor. a numărului de serie, colectorul va fi afișat ca fiind adăugat cu succes. Sfat: Faceți clic pe „Confirmare” pentru a Pentru a accesa direct interfața rețelei de distribuție, consultați Pasul 2 din „Configurarea WiFi” de mai jos.

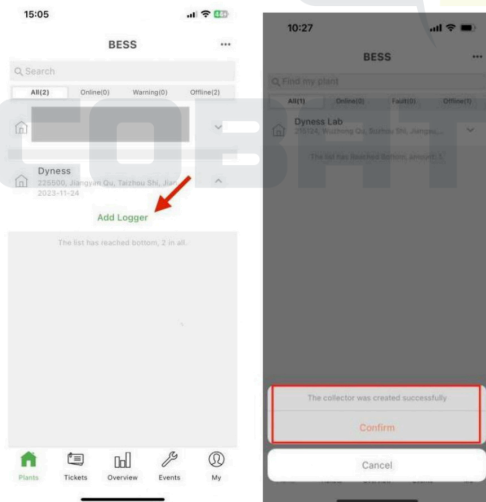

Pasul 1: Rețea de distribuție WIFI, utilizați aplicația Dyness smart ESS pentru a scana codul QR de pe eticheta înregistratorului Wi-Fi.



Pasul 2: Deschideți aplicația și comutați la pagina „Eu” după conectare, faceți clic pe „Configurare rețea”, selectați rețeaua wireless, introduceți parola și scanați numărul SN al colectorului care va fi distribuit. Faceți clic pe butonul „Start Config” pentru a configura rețeaua și așteptați ca configurarea să aibă succes.

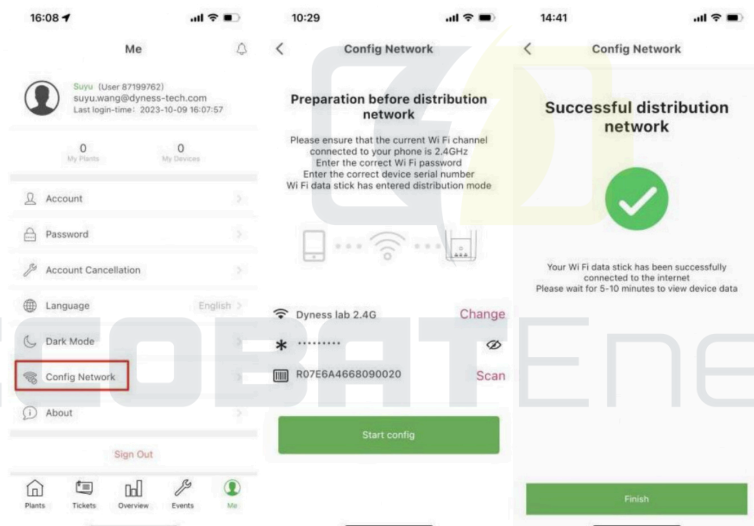



## 7 Vizualizați informațiile despre baterie

După configurarea cu succes a rețelei, așteptați 5-10 minute, reveniți la interfața „Instalații”, faceți clic pe butonul derulant al colectorului, așa cum se arată mai jos, apoi puteți vedea informații despre BMS; faceți clic pe BMS pentru a vedea mai multe informații despre baterie, așa cum se arată mai jos.

**BESS**

Find my plant

Online(3) Fault(0) Offline(4)

杭州环流, 浙江省杭州市, Xian SH, Shaoen...

SK House South Africa

泰州大泰 22500, Jiangyin Qu, Taizhou SH, Jiangsu... 2023-11-24

test123 215122, Gusu Qu, Suzhou SH, Jiangsu, China

DyinessSoftTest\_JuniorBox 22500, Jiangyin Qu, Taizhou SH, Jiangsu... 2023-11-14

Dyiness suzhou LV 215124, Wuzhong Qu, Suzhou SH, Jiangsu...

**Dyiness Suzhou** 215124, Wuzhong Qu, Suzhou SH, Jiangsu...

Collector R07EA4668090028

Add Collector

The list has Reached Bottom, amount: 8.

Plants Tickets Overview Events Me

**Battery**

Charge-Discharge

SOC: 100.0 SOH: 100.0

Remaining Battery Power Rated Battery Capacity: 10.65 kWh 10.65 kWh

Suggested Charging Current: 5.5 A Suggested Discharge Current: 22.2 A

Maximum Single Pressure Value: 3.335 v Number Of Battery Cycles: 36

Minimum Single Pressure Value: 3.325 v

**Temperature**

Maximum Temperature Value: 22.0 °C Minimum Temperature Value: 18.0 °C

Battery: R07EA4668090028-BDU-01

**Basic Information**

BMS\_SN: R07EA4668090028-BDU

PACK\_SN: R07EA4668090028-BDU-01

Current Serial Number: 1

Number Of Individual Voltages: 30

Number Of Individual Temperatures: 20

| VDiff  |        |        |        |        |
|--------|--------|--------|--------|--------|
| 1      | 2      | 3      | 4      | 5      |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |
| 6      | 7      | 8      | 9      | 10     |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |
| 11     | 12     | 13     | 14     | 15     |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |
| 16     | 17     | 18     | 19     | 20     |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |
| 21     | 22     | 23     | 24     | 25     |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |
| 26     | 27     | 28     | 29     | 30     |
| 3.33 v | 3.33 v | 3.33 v | 3.33 v | 3.33 v |

Monomer Differential Pressure 0.00 v

**Battery**

100%

**Basic Information**

Bdu Serial Number: R07EA4668090028-BDU110

Current: 0.0 A Total Pressure: 299.5 v

Battery Status: 0 Relay Status: 0

Number Of Battery Strings Per Box: 30 Number Of Single Cluster Boxes: 3.0

Device Address: 1

**Charge-Discharge**

SOC: 100.0 SOH: 100.0

Remaining Battery Power Rated Battery Capacity: 10.65 kWh 10.65 kWh

Suggested Charging Current: 5.5 A Suggested Discharge Current: 22.2 A

Maximum Single Pressure Value: 3.335 v Number Of Battery Cycles: 36

Minimum Single Pressure Value: 3.325 v

**Temperature**

Maximum Temperature Value: 22.0 °C Minimum Temperature Value: 18.0 °C

Battery: R07EA4668090028-BDU-01

**Basic Information**

BMS\_SN: R07EA4668090028-BDU

PACK\_SN: R07EA4668090028-BDU-01

Current Serial Number: 1

Number Of Individual Voltages: 30


Number Of Individual Temperatures: 20


## 8 Autorizare utilizator

Vă rugăm să faceți clic pe coloana „Vizitator fabrică” pentru a introduce numărul de e-mail al utilizatorului care urmează să fie autorizat și pentru a-l adăuga.

așa cum se arată în figura de mai jos pentru a autoriza utilizatorul.

Selecțai instalația pe care doriți să o autorizați--> Faceți clic pe „...”--> Faceți clic pe „Editare”--> Faceți clic pe coloana „Vizitator instalație”--> Adăugați utilizatorul--> Faceți clic pe „Finalizare”--> Faceți clic pe „Finalizare”--> Afișați rezultatul cu succes

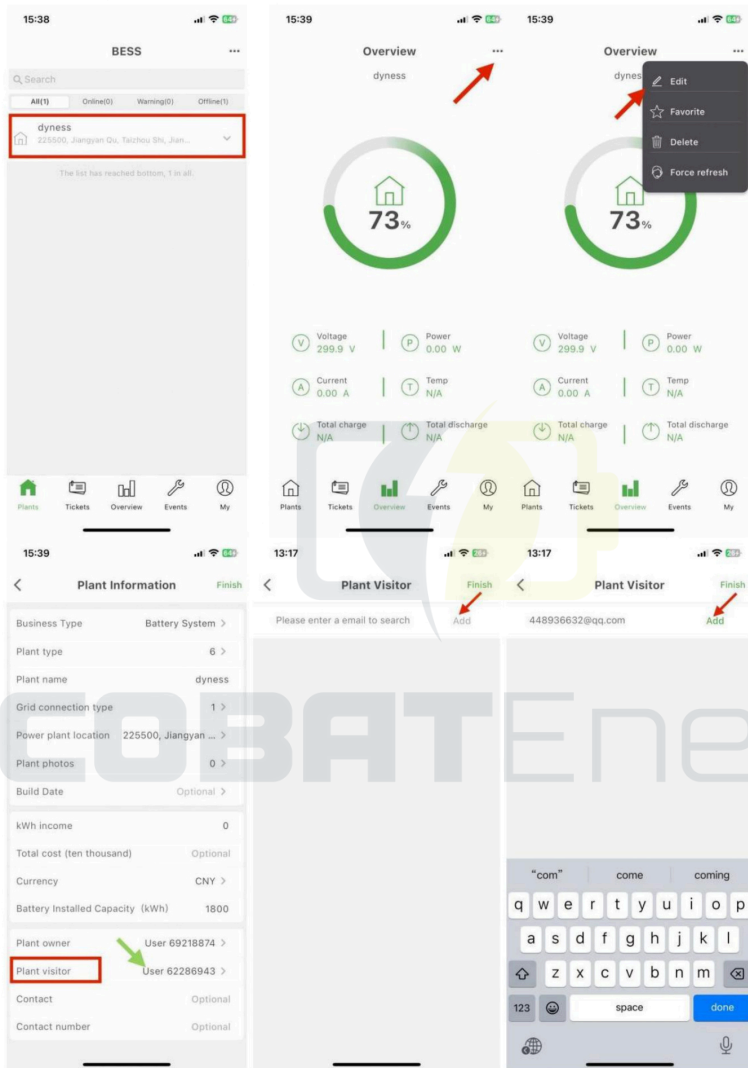

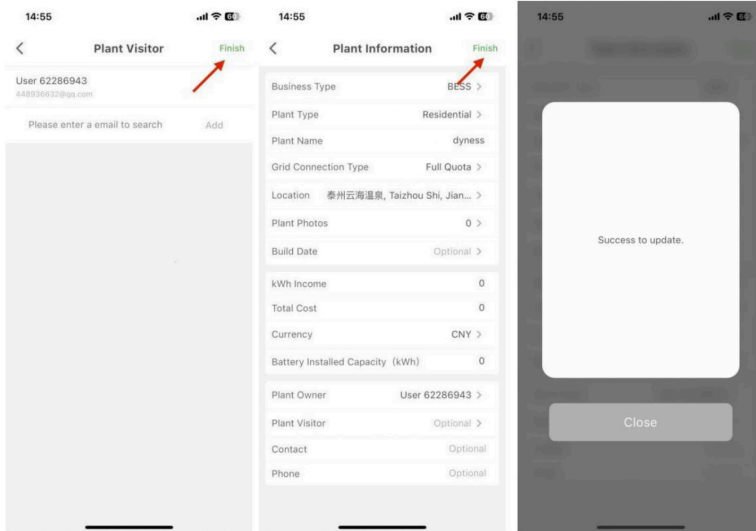

9 Setări permisiuni de date pentru utilizatori cu roluri diferite (Doar persoana responsabilă are această permisiune)

Site web de conectare: <https://server.dyness.com/index>

① Pentru utilizatorul final

Faceți clic pe „Organizație” ----> Faceți clic pe „Set de puncte” ----> selectați coloana „Grup de utilizatori finali” și faceți clic pe „Stație” „alocare”---->Selectați „BMS-Dyiness- Presiune înaltă” sub Atribuit---> Selectați informațiile care fac

nu doresc ca utilizatorii finali să vadă în aplicație, cum ar fi numărul de cicluri și să facă clic pe butonul „Eliminare”---

->Afișați „Eliminat cu succes” și îl puteți vedea pe cel pe care tocmai l-ați eliminat în stângă



**Dyness** Data Dashboard / Organization / Organization

Organization

Member List Organization Information **Measurement Group** + New Group

Name

End User Group [Distribution Of Measurement Points](#)

All point sets [Distribution Of Measurement Points](#) [Modify](#) [Delete](#)

**Dyness** Data Dashboard / Organization / Organization

Organization

Member List Organization Information **Measurement Group** + New Group

Name

**End User Group** [Distribution Of Measurement Points](#)

All point sets [Distribution Of Measurement Points](#) [Modify](#) [Delete](#)

**Dyness** Data Dashboard / Organization / Organization

**Distribution Of Measurement Points**

Unsigned BMS / Dyness / High Volt...

| Measurin<br>g Point I<br>D | Alarm typ<br>e | Name                          |
|----------------------------|----------------|-------------------------------|
| <input type="checkbox"/>   |                | 10 Eida Serial Number         |
| <input type="checkbox"/>   |                | 20 Pcb Serial Number          |
| <input type="checkbox"/>   |                | 30 Boot Version Number        |
| <input type="checkbox"/>   |                | 40 Hardware Version Number    |
| <input type="checkbox"/>   |                | 50 App Version Number         |
| <input type="checkbox"/>   |                | 1000 Current                  |
| <input type="checkbox"/>   |                | 1100 Total Pressure           |
| <input type="checkbox"/>   |                | 1200 Battery Status           |
| <input type="checkbox"/>   |                | 1300 Relay Status             |
| <input type="checkbox"/>   |                | 1400 SOC                      |
| <input type="checkbox"/>   |                | 1500 SOH                      |
| <input type="checkbox"/>   |                | 1600 Remaining Battery Power  |
| <input type="checkbox"/>   |                | 1700 Rated Battery Capacity   |
| <input type="checkbox"/>   |                | 1800 Number Of Battery Cycles |


Assigned BMS / Dyness / High Volt...

Batteries > Dyness > Low Voltage Junior Box ✓ High Voltage

BMS > Logger

No Data

Close [Feedback](#) [Add](#)

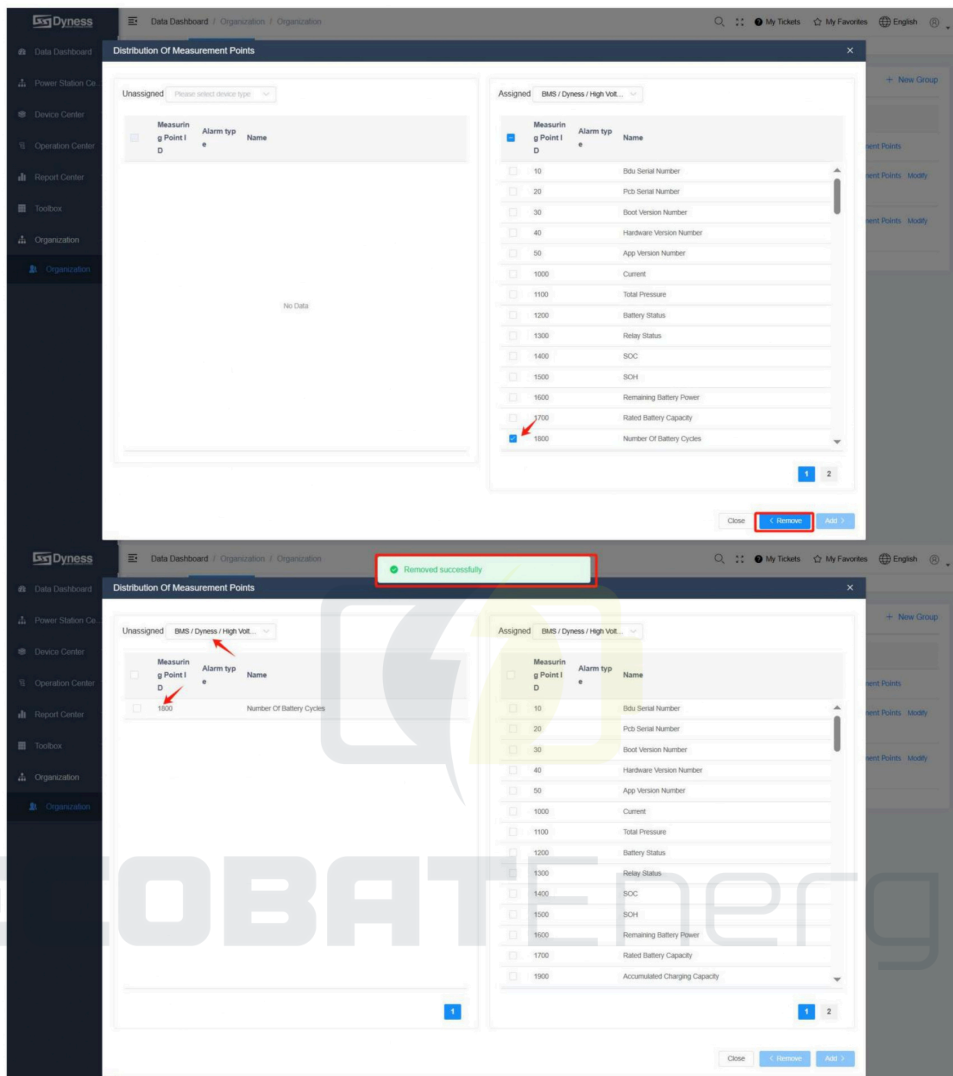

## ② Pentru alte roluri, Administrator/Manager Operațiuni/Operațiuni și Întreținere

Utilizator/Instalator/Utilizator general/Personal de marketing

Trebuie să adăugați un grup nou, apoi să faceți clic pe „Alocare stație”----> selectați „BMS--Dyness-- Presiune înaltă” sub Nedistribuit---->Selectați informațiile pe care doriți ca rolul să le vadă în aplicație și faceți clic pe „Adăugare”.

buton--->Afișează „Adăugare cu succes” și poți vedea pe cel pe care tocmai l-ai adăugat în dreapta

Notă: Dacă doriți ca aceste roluri să aibă aceleași permisiuni de date, atunci trebuie doar să creați un singur grup nou.

**Dyness** Data Dashboard / Organization / Organization

Organization

Member List Organization Information **Measurement Group** + New Group

| Name           |
|----------------|
| End User Group |
| All point sets |

Buttons: Distribution Of Measurement Points, Modify, Delete

**Dyness** Data Dashboard / Organization / Organization

Measurement Group

\* Name (Default)

Please enter name:

Name (Chinese)

Name (English)

Name (Portuguese)

pointGroup.groupName(cs)

pointGroup.groupName(de)




**Dyness** Data Dashboard / Organization / Organization

Organization

Member List Organization Information **Measurement Group** + New Group

| Name           |
|----------------|
| End User Group |
| All point sets |

Buttons: Distribution Of Measurement Points, Modify, Delete

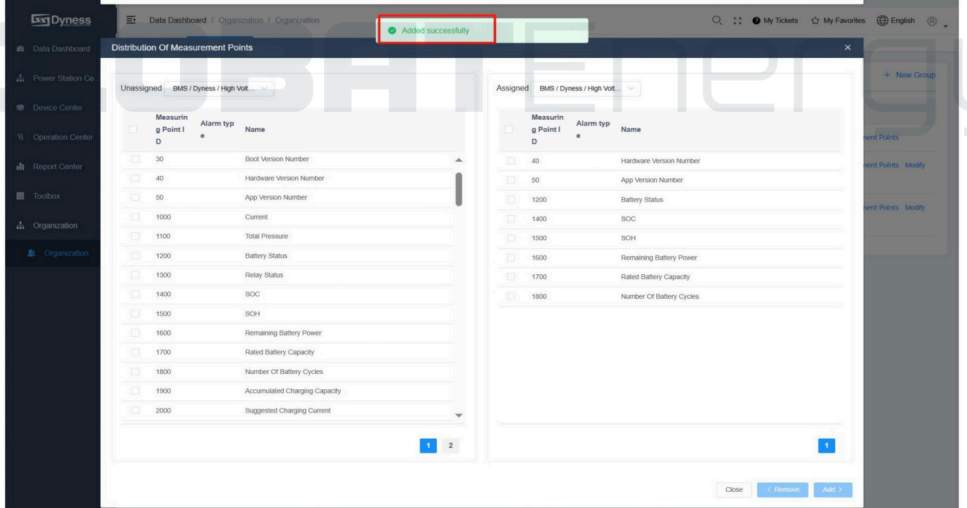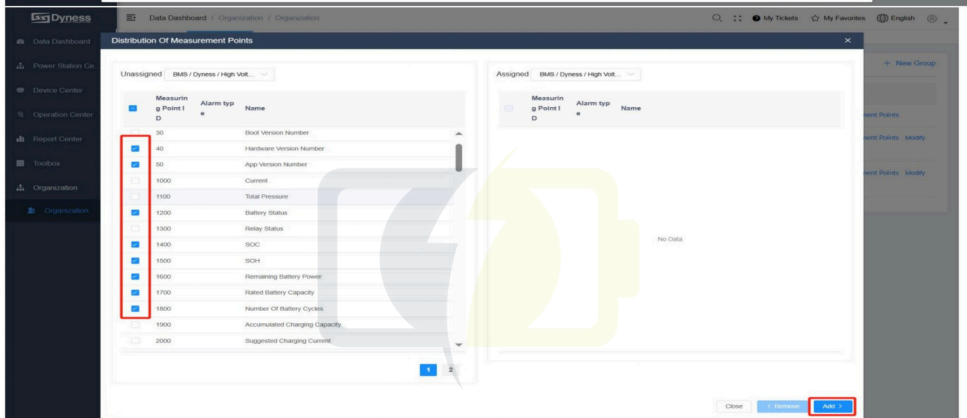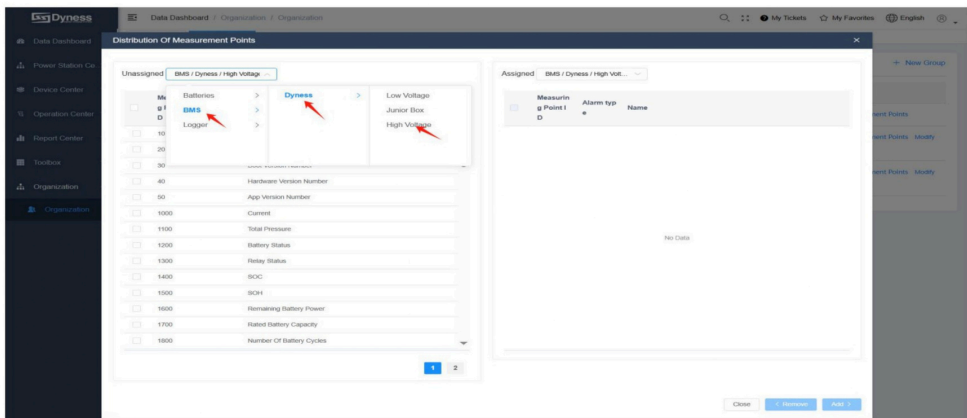

10 Modificați rolul utilizatorului, pașii detaliați sunt următorii:

Selecțai „Listă membri”---->Selecțai membrul al cărui rol trebuie să îl modificați---->Faceți clic pe „Modificare” sub Operațiune----> Găsiți „Rol”----> Mai întâi trebuie să faceți clic pe rolul vechi, fundalul său va deveni alb----> Apoi faceți clic pe rolul pe care doriți să îl modificați, fundalul acestuia va deveni albastru ----> Faceți clic pe „Salvare” ----> După modificarea cu succes, puteți vedea noul său rol în coloana rol.



The top screenshot shows the 'Member List' table with the following data:

| Status                              | User Name                    | Name                 | Role                                                                                        | Email                        | Operation                                                     |
|-------------------------------------|------------------------------|----------------------|---------------------------------------------------------------------------------------------|------------------------------|---------------------------------------------------------------|
| <input checked="" type="checkbox"/> | luhuagun@dyness-tech.com     | 柳华刚                  | Manager<br>Administrator<br>Operation<br>Installer<br>General User<br>Marketing<br>End User | luhuagun@dyness-tech.com     | Modify<br>Transfer Organizational<br>Delete<br>Reset password |
| <input checked="" type="checkbox"/> | yanglianyu@dyness-tech.com   | 杨国宇                  | Administrator                                                                               | yanglianyu@dyness-tech.com   | Modify<br>Transfer Organizational<br>Delete<br>Reset password |
| <input checked="" type="checkbox"/> | quxiao@dyness-tech.com       | 邱晓                   | Administrator                                                                               | quxiao@dyness-tech.com       | Modify<br>Transfer Organizational<br>Delete<br>Reset password |
| <input checked="" type="checkbox"/> | hena@dyness-tech.com         | hena@dyness-tech.com | Marketing                                                                                   | hena@dyness-tech.com         | Modify<br>Transfer Organizational<br>Delete<br>Reset password |
| <input checked="" type="checkbox"/> | rayven liang@dyness-tech.com | rayven liang         | Marketing                                                                                   | rayven.liang@dyness-tech.com | Modify<br>Transfer Organizational<br>Delete<br>Reset password |

The bottom screenshot shows the 'Member Information Modified' dialog box with the following fields:

- Members of the same organ:
- Phone Number:
- \* Email: yanglianyu@dyness-tech.com
- Role: **Administrator** (selected)
- Measurement Group: All point sets



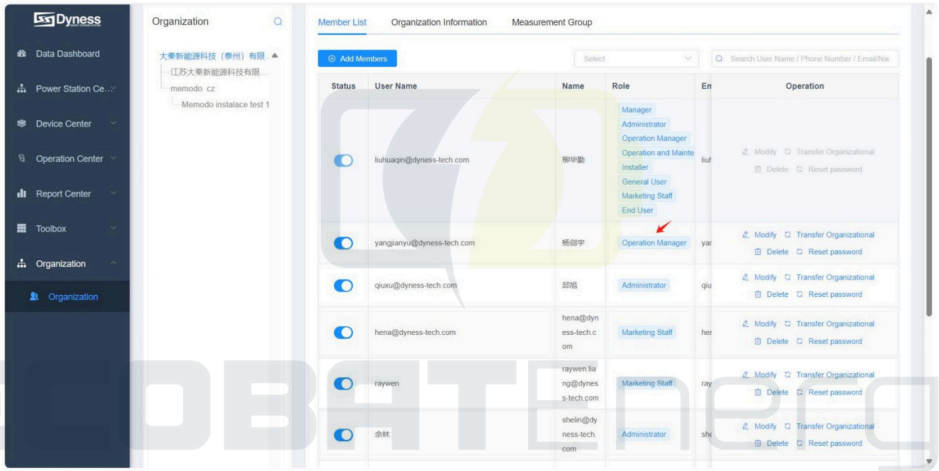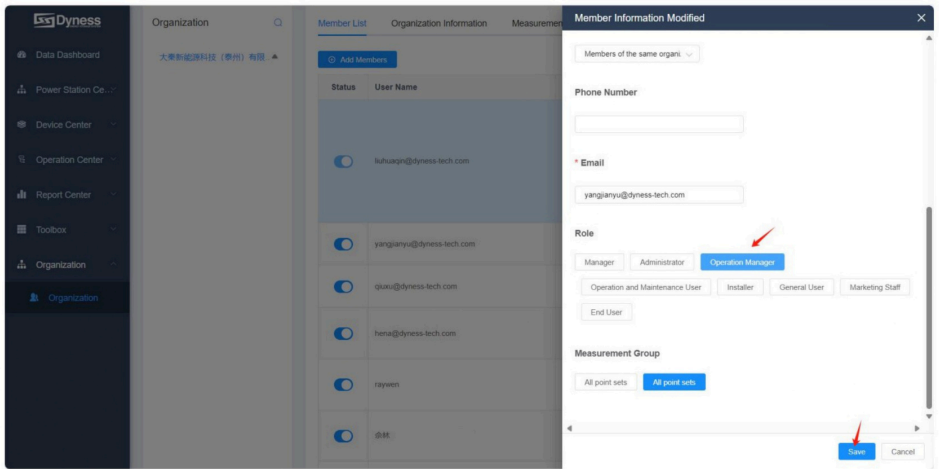

## 11 OTA al BMS, Pașii detaliați sunt următorii:

Selecția „Logger”---->Selecția logger-ului care trebuie actualizat (înregistratorul trebuie să fie online)---->Faceți clic pe „Serial Number” al BMS-ului---->Faceți clic pe „OTA”---->Găsiți firmware-ul care trebuie actualizat-->

Faceți clic pe „Actualizare acum” --> După finalizarea actualizării, puteți vedea mesajul „Actualizarea dispozitivului a reușit”

Notă: 1. Următoarele tipuri de roluri au permisiuni OTA: „Manager”, „Administrator”, „Operațiune”

„Manager”, „Utilizator Operare și Întreținere”, „Instalator”;

2. când vedeți mesajul „Actualizare dispozitiv reușită”, actualizarea internă a BMS nu a fost efectuată finalizat, iar acest proces poate dura 5-20 de minute. Vă rugăm să nu opriți și să nu reporniți bateria.

În această perioadă.

The screenshot displays the Dyness BMS web interface. The left sidebar shows the navigation menu with 'Logger' highlighted. The main area is divided into two sections: 'Logger' and 'Logger Details Page'.

**Logger Section:**

- Filters: All (11512), Online (113), Fault (0), Offline (11706).
- Table columns: Status, Serial Number, Firmware Version, Signal Strength, Affiliated Power Plant, Labels, Timezone, Data Update Time, Operation.
- Table data (highlighted row):

| Status | Serial Number   | Firmware Version      | Signal Strength | Affiliated Power Plant | Labels | Timezone      | Data Update Time | Operation |
|--------|-----------------|-----------------------|-----------------|------------------------|--------|---------------|------------------|-----------|
| Online | ROT7A4668100004 | RSW_14002_1_V2.01.102 | 100%            | Dyness wudhou RBB      | 11-17  | Asia/Shanghai | 2024-02-03 09:40 |           |
| Online | ROT7A4668100005 | RSW_14002_1_V2.01.56  | 100%            | Dyness wudhou DL2.5    | 11-17  | Asia/Shanghai | 2024-02-03 09:38 |           |
| Online | ROT7A4668100006 | RSW_14002_1_V2.01.102 | 100%            | Dyness ems             | 11-17  | Europe/Paris  | 2024-02-03 09:41 |           |
| Online | ROT7A4668130000 | RSW_14002_1_V2.01.95  | 100%            | BBS                    | 11-17  | Asia/Shanghai | 2024-02-03 09:39 |           |
| Online | ROT7A4668130005 | RSW_14002_1_V2.01.95  | 100%            | Wudhou                 | 11-17  | Asia/Shanghai | 2024-02-03 09:38 |           |
| Online | ROT7A4668170014 | RSW_14002_1_V2.01.56  | 100%            | Dyness wudhou LV       | 11-17  | Europe/Paris  | 2024-02-03 09:42 |           |

**Logger Details Page (ROT7A4668130000):**

- Basic Information:

| Serial Number   | Alias Name | Status | Affiliated Power Plant |
|-----------------|------------|--------|------------------------|
| ROT7A4668130000 |            | Online | BBS                    |
- Associate Subdevices:

| Status | Serial Number   | Total Battery Count | Total Current(A) | Avg SOC(%) | Avg SOH(%) | Affiliated Power Plant | Alias Name | Data Update Time |
|--------|-----------------|---------------------|------------------|------------|------------|------------------------|------------|------------------|
| Online | 544603221110004 |                     | 0A               | 95%        | 100%       | BBS                    |            | 2024-02-03 09:39 |

Dyness

Data Dashboard

Power Station Ca

Device Center

Logger

Inverter

BESS

Operation Center

Report Center

Toolbox

Organization

Battery System Details Page

5448002231170004

Data Update Time: 2024-02-03 09:44 (Asia/Shanghai)

Alarm

Unbind

New Ticket

Config

Alias Setting

OTA

Operation Log

Basic Information

BMS\_SN: 5448002231170004

PACK\_SN: 5448002231170004-01

Current Serial Number: 1

Number Of Individual Voltages: 30

Number Of Individual Temperatures: 2

Single core voltage1: 3.318 V

Single core voltage2: 3.300 V

Single core voltage3: 3.320 V

Single core voltage4: 3.321 V

Single core voltage5: 3.320 V

Single core voltage6: 3.320 V

Single core voltage7: 3.320 V

Single core voltage8: 3.320 V

Single core voltage9: 3.321 V

Single core voltage10: 3.321 V

Single core voltage11: 3.321 V

Single core voltage12: 3.300 V

Single core voltage13: 3.320 V

Single core voltage14: 3.320 V

Single core voltage15: 3.320 V

Single core voltage16: 3.320 V

Single core voltage17: 3.320 V

Single core voltage18: 3.320 V

Single core voltage19: 3.320 V

Single core voltage20: 3.320 V

Single core voltage21: 3.320 V

Single core voltage22: 3.320 V

Single core voltage23: 3.318 V

Single core voltage24: 3.320 V

Single core voltage25: 3.320 V

Single core voltage26: 3.320 V

Single core voltage27: 3.320 V

Single core voltage28: 3.321 V

Single core voltage29: 3.318 V

Single core voltage30: 3.318 V

differential pressure of the battery: 0.003 V

Temperature1: 13.70°C

Temperature2: 13.90°C

Battery: 5448002231170004-02

Data Update Time: 2024-02-03 09:44 (Asia/Shanghai)

Unbind

Roll

Dyness

Data Dashboard

Power Station Ca

Device Center

Logger

Inverter

BESS

Operation Center

Report Center

Toolbox

Organization

Battery System Details Page

4668270009

Data Update Time: 2024-02-05 13:53

OTA

Device Information

Serial Number: 4668270009

Alias Name:

Status: Online

Data Update Time: 2024-02-05 13:53

Firmware Name:

Search

Reset

| Firmware Name   | Firmware Version | Extended Info                 | Note | Update Time      |
|-----------------|------------------|-------------------------------|------|------------------|
| 4668270009_7400 | 02               | Name: does not distinguish... | 固件4  | 2024-01-23 14:01 |
| 930RFE41        | 04               | Name: does not distinguish... | 固件4  | 2024-01-23 14:01 |
| 930RFE41        | 09               | Name: does not distinguish... | 固件1  | 2024-01-22 13:01 |
| 930RFE41        | 09               | Name: does not distinguish... | 固件1  | 2024-01-22 13:01 |
| 930RFE29ko      | 09               | Name: does not distinguish... | 固件1  | 2024-01-22 13:01 |

Timeout settings for this upgrade: 15 Minutes

Upgrade Now

Cancel

Basic Information

BMS Serial Number: 4668270009

Total Pressure: 395.5 V

Number Of Battery Strings Per Bus: 30

Charge-Discharge

SOC: 100

Rated Battery Capacity: 14.2 kWh

Maximum Single Pressure Value: 3.320 V

Temperature

Maximum Temperature Value: 45.0 °C

Battery: 4668270009-01

Data Update Time: 2024-02-05 13:53

Basic Information

BMS\_SN: 4668270009

Number Of Individual Voltages: 30

Dyness

Data Dashboard

Power Station Ca

Device Center

Logger

Inverter

BESS

Operation Center

Report Center

Toolbox

Organization

Battery System Details Page

5448002231170004

Data Update Time: 2024-02-03 09:44 (Asia/Shanghai)

OTA

Device Information

Serial Number: 5448002231170004

Alias Name:

Status: Online

Data Update Time: 2024-02-03 09:44

Firmware Name:

Search

Reset

| Firmware Name        | Firmware Version | Extended Info                 | Note       | Update Time      |
|----------------------|------------------|-------------------------------|------------|------------------|
| 930RFE29ko           | 01               | Name: does not distinguish... | 固件1        | 2024-01-18 15:01 |
| 930RFE41             | 05               | Name: does not distinguish... | 固件1        | 2024-01-18 14:01 |
| 930RFE29F            | 01               | Name: does not distinguish... | 固件1        | 2024-01-18 14:01 |
| 930RFE29ko           | 03               | Name: does not distinguish... | 固件1        | 2024-01-18 14:01 |
| 5448002231170004_310 | 23122010         | Name: does not distinguish... | 固件23122010 | 2023-12-20 17:12 |

Timeout settings for this upgrade: 15 Minutes

Upgrade Now

Cancel

Last operation status

固件升级成功

2024-02-03 09:47:29 OTA command sent to gateway

2024-02-03 09:47:29 Order sent to device

2024-02-03 09:49:50 Device upgrade succeeded

Basic Information

BMS\_SN: 5448002231170004

Number Of Individual Voltages: 30



Daqin New Energy Tech (Taizhou) Co., Ltd.  
Address: Building 13, Kunshan Jiangyan Industrial  
Park, Chenzhuang West Road, Jiangyan District,  
Taizhou City, Jiangsu Province, China, 225500.  
Email: Sales@dyness-tech.com  
Website: www.dyness-tech.com.cn



**ECOBAT**Energy

**ECOBAT ENERGY - IMPORTATOR DIRECT**

## **AVANTAJE EXCLUSIVISTE INSTALATORI & REVÂNZĂTORI B2B**



**Preturi  
dedicate**

**Pentru Instalatori  
& Revânzători**

**Stoc  
permanent  
în România**



**Livrare  
imediată**  
**24 - 48 ore**

**01** **Prețuri dedicate**  
Pentru **Instalatori**  
& **Revânzători**



Punem accent pe parteneriatele noastre și recunoaștem rolul vital pe care îl jucați în industria energiei solare.

De aceea, oferim prețuri dedicate și competitive pentru instalatori și revânzători.

Aveți avantajul de a obține produsele noastre la costuri atractive, ceea ce vă permite să maximizați profitabilitatea și să oferiți prețuri competitive clienților dumneavoastră.

**Suntem aici să creștem împreună.**



Avem un stoc amplu de echipamente fotovoltaice în depozitul nostru din România.

Acest lucru ne permite să vă oferim posibilitatea de a ridica produsele imediat după comandă.

Nu trebuie să vă faceți griji cu privire la disponibilitatea sau întârzierile în livrare.

Suntem aici pentru a vă asigura că aveți acces rapid la echipamentele necesare pentru proiectele dvs.

03

**Livrare imediată**  
**Livrare în 24-48 de ore**  
oriunde în România



Înțelegem importanța unei livrări rapide și eficiente, într-o piață din ce în ce mai concurențială.

Cunoaștem urgența cu care utilizatorul final își dorește să definitiveze proiectul.

Colaborând cu Ecobat Energy, beneficiați de livrarea comenzilor dvs. în termen de 24-48 de ore, indiferent de locația din România.

Ne angajăm să vă furnizăm produsele la timp, astfel încât să puteți continua proiectele în mod eficient.





**Ești instalator sau revânzător de echipamente fotovoltaice?**

**Devino partener B2B EcobatEnergy  
și beneficiază acum de toate  
avantajele exclusive.**

**[www.ecobatenergy.ro](http://www.ecobatenergy.ro)**

**[office@ecobatenergy.ro](mailto:office@ecobatenergy.ro)**

**[0786.913.321](tel:0786.913.321)**